



## **DRY CROSSHAIR™ PLATE SYSTEM**

**NOS Kit Number: 02157NOS  
NOS Plate Kit Number: 12667NOS**



**02157NOS**

**(shown with optional solenoids 18048NOS or 18048R-SNOS – solenoids not included)**

## **OWNER'S MANUAL P/N 199R10932**

**NOTICE: Installation of Nitrous Oxide Systems Inc. products signifies that you have read this document and have agreed to the terms stated within.**

It is the purchaser's responsibility to follow all installation instruction guidelines and safety procedures supplied with the product as it is received by the purchaser to determine the compatibility of the product with the vehicle or the device the purchaser intends to install the product on.

Nitrous Oxide Systems Inc. assumes no responsibility for damages occurring from accident, misuse, abuse, improper installation, improper operation, lack of reasonable care, or all previously stated reasons resulting from incompatibility with other manufacturers' products.

Nitrous Oxide Systems Inc. assumes no responsibility or liability for damages incurred by the use of products manufactured or sold by Nitrous Oxide Systems Inc. on vehicles used for competition or racing.

Nitrous Oxide Systems Inc. neither recommends nor condones the use of products manufactured or sold by Nitrous Oxide Systems Inc. on vehicles, which may be driven on public roads or highways, and assumes no responsibility for damages incurred by such use.

NOS nitrous oxide is legal for use in most states when used in accordance with state and local traffic laws. NOS does not recommend or condone the use of its products in illegal racing activities.

NOS has not pursued California Air Research Board (CARB) exemptions for these kits, hence, they are not legal for use on pollution-controlled vehicles in California. A correctly installed NOS nitrous system should not alter the emission control performance of your vehicle under standard EPA test cycle conditions.

**NOTICE: The NOS Dry Crosshair™ Plate System Kit is not intended for use on hatchback type vehicles without the use of NOS part numbers 16160NOS (External Aluminum Blow-Down Tube) and 16169NOS (Racer Safety Pressure Relief Adapter).**

## HAZARDS DEFINED

This manual presents step-by-step instructions that describe the process of installing your NOS Nitrous Oxide Injection System. These procedures provide a framework for installation and operation of this kit. Parts are referenced by name and number to avoid confusion. Within the instructions, you are advised of potential hazards, pitfalls, and problems to avoid. The following examples explain the various hazard levels:

**WARNING!** Failure to comply with instructions may result in injury or death.

**CAUTION!** Failure to comply with instructions may result in damage to equipment.

**NOTE:** This information is important, needs to be emphasized, and is set apart from the rest of the text.

**HINT:** These special instructions provide a handy work tip.

## NITROUS OXIDE INJECTION SYSTEM SAFETY TIPS

### WARNINGS

Do not attempt to start the engine if the nitrous has been injected while the engine was not running. Disconnect the coil wire and turn the engine over with the throttle wide open for several revolutions before attempting to start. Failure to do so can result in extreme engine damage.

Never permit oil, grease, or any other readily combustible substances to come in contact with cylinders, valves, solenoids, hoses, and fittings. Oil and certain gases (such as oxygen and nitrous oxide) may combine to produce a flammable condition.

Never interchange nitrous and fuel solenoids. Failure to follow these simple instructions can result in extreme engine damage and/or personal injury.

Never drop or violently strike the nitrous bottle. Doing so may result in an explosive bottle failure.

Never change the pressure settings of the safety relief valve on the nitrous bottle valve. Increasing the safety relief valve pressure settings may create an explosive bottle hazard.

Please note that the NOS bottle label has changed to a two-part assembly. The first label is already located on the bottle. Upon filling your bottle with nitrous oxide, apply the (second) material information label in the area indicated in the picture to the right.

**NOTE:** The material information decal is located in the same plastic bag as the bottle.

**WARNING!** Once the nitrous bottle has been filled, it must be shipped according to the applicable transportation and shipping regulations!

Do not deface or remove any markings, which are used for content identification.



Nitrous bottle valves should always be closed when the system is not being used.

Notify the supplier of any condition that may have permitted any foreign matter to enter the valve or bottle.

Keep the valves closed on all empty bottles to prevent accidental contamination.

After storage, open the nitrous bottle valve for an instant to clear the opening of any possible dust or dirt.

It is important that all threads on the valves and solenoids are properly mated. Never force connections that do not fit properly.

Identify the gas content by the NOS label on the bottle before using. If the bottle is not identified to show the gas contained, return the bottle to the supplier.

**CONGRATULATIONS** on purchasing your NOS Nitrous Oxide Injection System. Your system is composed of the highest quality components available. It should provide many miles of trouble-free performance when used correctly. If you have any questions regarding the performance of your system, call NOS Technical Service at 1-866-464-6553.

# TABLE OF CONTENTS

<b>WHAT IS NITROUS OXIDE?</b> .....	<b>3</b>
<b>Do's and Don'ts of Nitrous Oxide</b> .....	<b>3</b>
<b>Chapter 1 Introduction to your NOS Nitrous Oxide Kit</b> .....	<b>4</b>
1.1 General Information .....	4
1.2 Dry Crosshair™ Plate System Requirements .....	4
1.3 Kit Components.....	5
<b>Chapter 2 Kit Installation</b> .....	<b>6</b>
2.1 Injector Plate Mounting .....	7
2.2 Solenoid Mounting .....	7
2.2.1 Nitrous Solenoid Installation .....	7
2.3 Nitrous Feed Line Mounting .....	7
2.4 Electrical System Installation.....	8
<b>Chapter 3 Tuning</b> .....	<b>9</b>
<b>Chapter 4 Preparing for Operation</b> .....	<b>10</b>
<b>Chapter 5 Advanced Tuning for Maximum Power</b> .....	<b>10</b>
5.1 Optimum Nitrous Jetting.....	10
5.1.1 Determining Optimum Nitrous Jetting.....	10
5.1.2 Determining Optimum Ignition Timing.....	11
<b>Chapter 6 Routine Maintenance</b> .....	<b>12</b>
6.1 Nitrous Solenoid Filter .....	12
6.2 Nitrous Solenoid Plunger .....	13
6.2.1 General Information.....	13
6.2.2 Nitrous Solenoid Plunger Disassembly and Inspection .....	13
<b>Appendix A Troubleshooting Guide</b> .....	<b>14</b>
<b>Nitrous Oxide Accessories</b> .....	<b>16</b>

## WHAT IS NITROUS OXIDE?

### NITROUS OXIDE...

...Is a cryogenic gas composed of nitrogen and oxygen molecules

...Is 36% oxygen by weight

...Is non-flammable by itself

...Is stored as a compressed liquid

...Exists in two grades—U.S.P. and Nitrous Plus:

- U.S.P. is medical grade nitrous oxide; its common use is dental and veterinary anesthesia. It is also commonly used as a propellant in canned whipped cream. U.S.P. is not available to the public.
- Nitrous Plus differs from U.S.P. in that it contains trace amounts of sulphur dioxide added to prevent substance abuse. Nitrous Plus is intended for automotive applications and is available for sale to the public

In automotive applications, Nitrous Plus and fuel are injected into the engine's intake manifold, which produces the following results:

- Lowers engine intake air temperature, producing a dense inlet charge.
- Increases the oxygen content of the inlet charge (air is only 22 percent oxygen by weight).
- Increases the rate at which combustion occurs in the engine's cylinders.

## Do's and Don'ts of Nitrous Oxide


### Do's

- Read all instructions before attempting to install your NOS nitrous system.
- Make sure your fuel delivery system is adequate for the nitrous jetting you have chosen. Inadequate fuel pressure or flow will result in engine damage.
- Use 14 gauge (minimum) wire when installing electrical system components.
- Use high-quality connections at all electrical joints.

- ❑ Use PTFE-based paste on pipe type fittings.
- ❑ Make sure your engine and related components (ignition, carburetor, and driveline) are in proper working condition.
- ❑ **If nitrous is accidentally injected into the engine when it is not running, remove the engine coil wire, open the throttle, and crank the engine 10 to 15 seconds before starting. Failure to do so can result in an explosive engine failure.**
- ❑ **Use your NOS nitrous system only at wide-open throttle and at engine speeds above 3000 RPM.**
- ❑ **Install a proper engine to chassis ground. Failure to do so may result in an explosive failure of the main nitrous supply line.**
- ❑ Use a high-quality fuel, as suggested in Chapter 3, Baseline Tuning Suggestions.

**Don'ts**

- ❑ Engage your nitrous system with the engine off. Severe engine damage can occur.
- ❑ Modify NOS nitrous systems (if you need a non-stock item, call NOS Technical Service for assistance)
- ❑ Overtighten AN type fittings.
- ❑ Use PTFE Tape on any pipe threads. Pieces of PTFE tape can break loose and become lodged in nitrous or fuel solenoids or solenoid filters. Debris lodged in a nitrous or fuel solenoid can cause catastrophic engine failure.

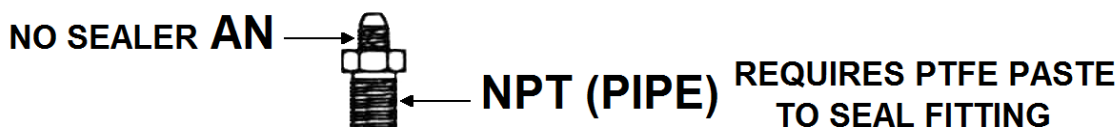

- ❑ Use sealant of any kind on AN type fittings.
- ❑ Allow nitrous pressure to exceed 1100 psi. Excessive pressure can cause swelling or in extreme cases failure of the nitrous solenoid plunger. Solenoid plungers are designed so that pressure-induced failures will prevent the valve from operating. No leakage should occur with this type of failure.
- ❑ **Inhale nitrous oxide. Death due to suffocation can occur.**
- ❑ **Allow nitrous oxide to come in contact with skin. Severe frostbite can occur.**
- ❑ Use octane boosters that contain methanol. Fuel solenoid failure may occur, producing severe engine damage.

## Chapter 1 Introduction to your NOS Nitrous Oxide Kit

### 1.1 General Information

NOS Dry Crosshair™ plate systems are intended for use on highly modified engines of at least 450 CID. Kit Numbers 02156NOS and 02157NOS are intended for single 4bbl applications using Dominator series Holley carburetor flange pattern. The crossed bar design is intended for use with intakes that have extended runner dividers that run into the plenum area to promote better cylinder-to-cylinder distribution.

**Table 1 Jetting and Power Levels**

HP	Jetting	Baseline Pressures*	Fuel Quality	Ignition Timing	Spark Plug Heat Range (NGK or Equiv)
	N <sub>2</sub> O	N <sub>2</sub> O			
200	2x52	950	110+ Octane	***	-9
225	2x59	950	112+ Octane	***	-10
250**	2x65	950	112+ Octane	***	-10
300**	2x73	950	114+ Octane	***	-10
325	2x85	950	114+ Octane	***	-11
350**	2x93	950	116+ Octane	***	-11

**\*Baseline Pressures are set as follows:**

Bottle pressure should be measured at the beginning of the run.

**\*\* Jetting included with kit**

**\*\*\* See section 5.1.2 for timing recommendations**

### 1.2 Dry Crosshair™ Plate System Requirements

When used correctly, NOS nitrous oxide injection elevates cylinder pressures and temperatures while increasing the combustion rate. These characteristics make the engine more sensitive to detonation. **To ensure proper performance and engine life, the following is an absolute must:**

**❑ Adequate Fuel Pressure and Delivery**

When designing your fuel system, plan on your pumps and lines flowing at least 0.10 gallons of *gasoline* per hour per horsepower. For *alcohol* applications, double this number.

**NOTE:** Most fuel pumps are rated at free-flowing conditions—at required fuel pressure, their flow rates may be greatly reduced.

**❑ Intake Manifold**

Due to the high flow rates of nitrous oxide and fuel that are attained with this kit, it is recommended that an intake with an open plenum (single plane) be used. Intake manifolds that feature individual orifices for each carburetor butterfly should not be used with this kit.

**❑ Forged Pistons**

Cast pistons are very prone to failure at elevated cylinder temperatures and pressures.

**❑ Connecting Rods**

Standard type forged connecting rods may not be adequate for the high-compressive loads generated with large doses of nitrous oxide.

**❑ Cylinder Block**

Four-bolt main cap blocks reduce the tendency for the main caps to “walk” under high-output loading. Cylinder head studs decrease the chance of cylinder heads lifting or moving relative to the cylinder block deck surface.

**❑ Crankshaft**

Stock-type cast crankshafts may break. Stock-type forgings can bend or twist in high-output applications.

**❑ High-Output Ignition System**

Stock-type ignition systems are prone to producing misfires at high-RPM, when subjected to high cylinder pressures. A quality aftermarket, racing ignition is suggested for all applications.

### 1.3 Kit Components

Before beginning the installation of your NOS kit, compare the components in your kit with those shown in Figure 1, and listed in Table 2 and 3. If any components are missing, please contact NOS Technical Support at 1-866-464-6553.

**Table 2 02157NOS System Parts List**

Item	Description	Qty.	NOS P/N
1	Injector Plate	1	*
2	Carburetor Stud	4	*
3	Carburetor Gasket	2	*
4	Nitrous Pro Race Solenoid	2	18048RNOS
5	6AN x 1/4" NPT Nitrous Filter	2	15564NOS
6	Solenoid Mounting Bracket	1	*
7	SS Flare Jet Assortment**	1	13760-**NOS
8	Short 3AN x 3AN SS Hardline	2	*
9	Long 3AN x 3AN SS Hardline	2	*
10	1/8" NPT x 3AN TEE (Blue)	2	17260NOS

**Table 3 12667NOS System Parts List**

Item	Description	Qty.	NOS P/N
1	Injector Plate	1	*
2	Carburetor Stud	4	*
3	Carburetor Gasket	2	*
5	6AN x 1/4" NPT Nitrous Filter	2	15564NOS
7	SS Flare Jet Assortment**	1	13760-**NOS
11	Nitrous Supply Hose	4	*
10	1/8" NPT x 3AN TEE (Blue)	2	17260NOS

\*Varies with application. \*\*Includes two each – 61, 65, 67, 73, 85, and 93.

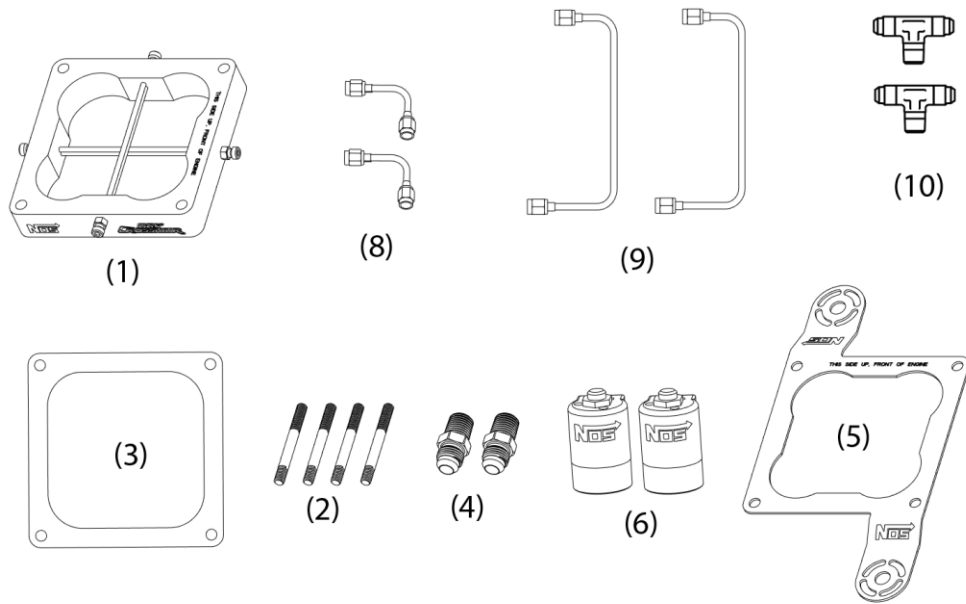


Figure 1

## Chapter 2 Kit Installation

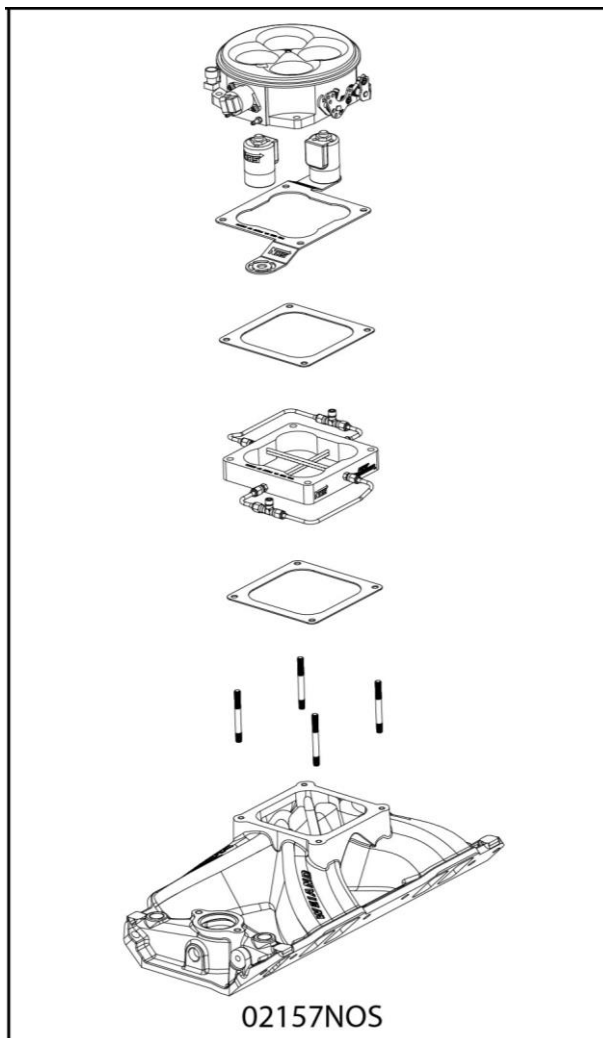


Figure 2 Crosshair™ Plate System Kit 02157NOS—Assembly Drawing

## 2.1 Injector Plate Mounting

Use the following procedure to install the injector plate (1):

1. Remove the inlet ducting and air cleaner.
2. Disconnect the throttle linkage.
3. Disconnect the fuel line.
4. Remove the throttle body.
5. Remove the stock studs.
6. Install the extended studs (2).
7. Install the injector plate (1) and gaskets (3) on the intake manifold with "THIS SIDE UP" facing up and toward the front of the engine. See Figure 2 for the illustration of the part installation.
8. Install the throttle body.
9. Connect the throttle linkage.

## 2.2 Solenoid Mounting

Use the following procedure to install the nitrous solenoids (4). See Figure 2 for the illustration of the part installation.

**NOTE:** Remember to use PTFE paste **only** on pipe threads.

### 2.2.1 Nitrous Solenoid Installation

**CAUTION:** Do not overtighten the vise in the following procedure, or the solenoid will be damaged.

1. Clamp the nitrous solenoid (4) in a bench vise.
2. Install the blue nitrous filter fitting (5) in the inlet port of the nitrous solenoid.
3. Attach the solenoid mounting bracket (if applicable) (6) to the nitrous solenoid.
4. Install a 1/8" NPT x 4 AN blue adapter (10) in the outlet port of the nitrous solenoid. **NOTE:** 18048RNOS nitrous solenoid has 3 ports: inlet, outlet, and purge. The inlet is on the side marked IN, outlet is on the bottom with no stamp mark, and purge is on the side marked P.
5. Loosely mount the nitrous solenoid.
6. Insert the proper nitrous jets (7) in the injector plate (See Section 1.1).
7. Connect the nitrous solenoid outlet port to the injector plate using the two 12" 4 AN x 3 AN blue N<sub>2</sub>O extension hoses (11).
8. Tighten the solenoid mount.

## 2.3 Nitrous Feed Line Mounting

1. Connect the open end of the blue nitrous filter fitting (5) to the nitrous supply line from your bottle.

**WARNING:** Nitrous oxide can cause death if inhaled. Severe frostbite can occur if allowed to contact the skin. Always point the nitrous line opening away from people when purging the line.

## 2.4 Electrical System Installation

**NOTE:** If you do not already have an electrical pack kit, it is available as NOS part # 15634NOS (Single Stage) or 15635NOS (Dual Stage).

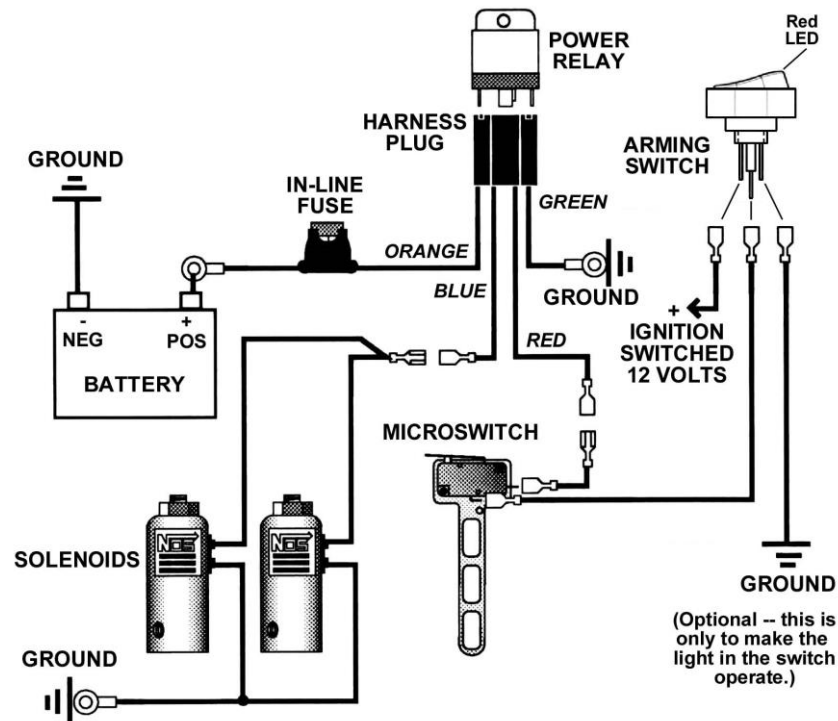


Figure 3 Electric Wiring Schematic

**WARNING!** Death or injury may occur from working on a charged electrical system.

1. Disconnect the car battery at the ground cable (if not already done).

**WARNING!** Binding or dragging of the throttle linkage will create a potentially dangerous stuck-throttle condition. Ensure that the microswitch does not interfere with normal throttle linkage operation.

2. Install the throttle microswitch as follows:

**HINT:** The microswitch may be mounted to the bracket in a variety of positions and on either side of the bracket. The bracket may be bent to suit the application.

- A. Mount the throttle microswitch on the throttle body so that the throttle linkage movement triggers the microswitch.
  - B. Adjust the microswitch to trigger at wide-open throttle by adjusting the microswitch's position to ensure the actuation arm of the microswitch "clicks" at the same point your throttle linkage reaches wide-open throttle against the throttle stop (Figure 4, Position A).
  - C. Ensure that the throttle and switch can reach the activation position, as shown in Figure 4, Position B, by using the accelerator pedal. Have an assistant slowly press the pedal to the floor while you listen for the "click" of the microswitch.
3. Install the NOS arming toggle switch in the vehicle interior, within easy reach of the driver. This switch is to be used to activate the nitrous system once safe engine RPM levels are reached.

**CAUTION!** Never activate your nitrous system below 3000 engine RPM. The installation of the Throttle RPM-Activated Switch, P/N 15982NOS is highly recommended to reduce the risk of engine damage while using this kit.

4. Install the wiring relay and relay harness in the engine compartment near the battery. The relay's orange wire should reach the battery (+) terminal.
5. Connect the orange relay wire to the battery (+) terminal. Install a 25 AMP fuse into the fuse socket.
6. Connect one wire from each solenoid together. Join the solenoid wires to the blue relay wire.



- Join the remaining solenoid wires together. Connect to a good chassis ground.

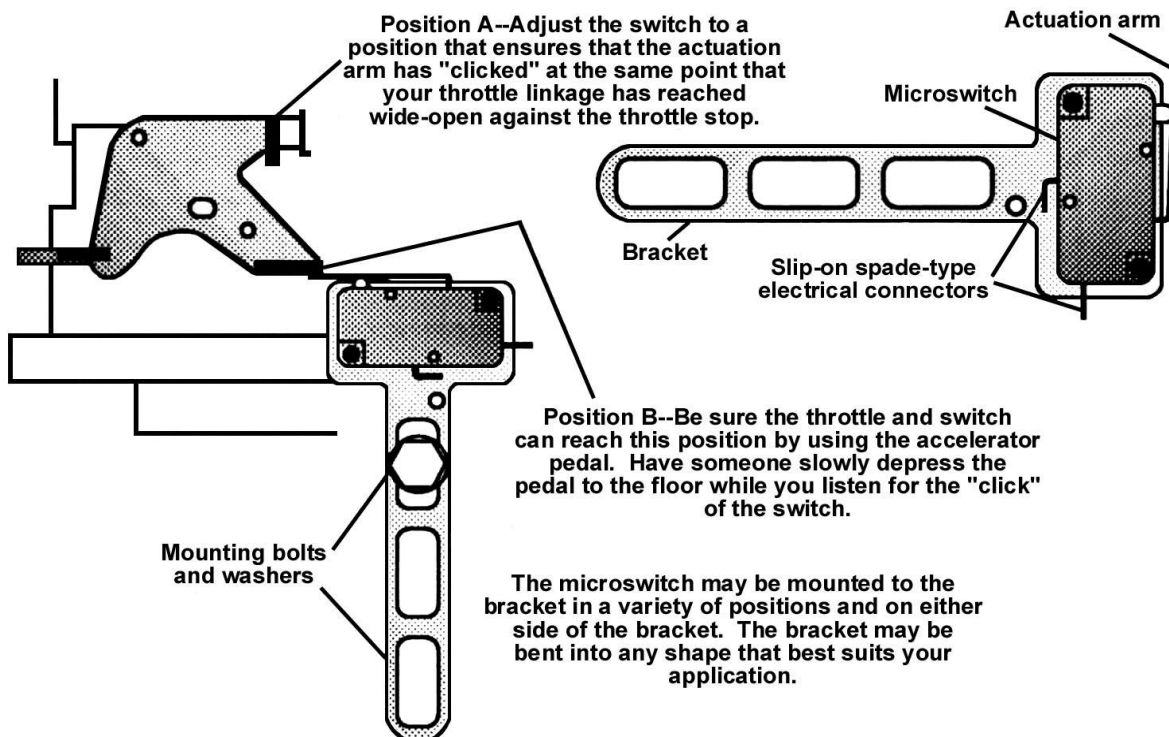


Figure 4 Microswitch Mounting

- Connect the green relay wire to a good chassis ground. If you are running a fuel pressure safety switch, install it here between the green wire and ground.
- Connect red relay wire to either terminal on the microswitch.
- Connect the open terminal on the microswitch to the center terminal on the arming rocker switch.
- Connect the terminal on the arming switch away from the LED to a switched 12 volt power source.
- Connect the terminal of the arming switch closest to the LED to ground.
- Reconnect the battery. Turn the arming switch on.
- Push the throttle wide open while the engine is off. Each solenoid should make a clicking noise if it is cycling correctly. If no noise is heard, check all the wiring connections and the wiring schematic in Figure 3.

## Chapter 3 Tuning

Your NOS Dry Crosshair™ Plate Kit comes with three sets of nitrous jets. These jetting combinations are based upon 950 psi nitrous bottle pressure. Operating with these pressure levels should yield safe and reliable power increases.

Using these jetting combinations with lower bottle pressure and/or higher fuel pressure may produce an excessively rich condition. This can result in a loss of power, excessive exhaust smoke (black), or misfiring (backfiring through the exhaust). This condition may also arise if your tune up is excessively rich.

If you experience any of these conditions, or you desire to maximize the power output from your system, you should refer to Chapter 5, "Advanced Tuning for Maximum Power".

**CAUTION: Use of excessive bottle pressure and/or inadequate fuel pressure can result in an excessively lean condition. In extreme cases, this will produce catastrophic engine failure.**

**Table 4 Suggested Baseline Tuning Combinations**

HP	Jetting	Baseline Pressures*	Fuel Quality	Ignition Timing	Spark Plug Heat Range (NGK or Equiv)
	N <sub>2</sub> O	N <sub>2</sub> O			
200	2x52	950	110+ Octane	***	-9
225	2x59	950	112+ Octane	***	-10
250**	2x65	950	112+ Octane	***	-10
300**	2x73	950	114+ Octane	***	-10
325	2x85	950	114+ Octane	***	-11
350**	2x93	950	116+ Octane	***	-11

**\*Baseline Pressures are set as follows:**

Bottle pressure should be measured at the beginning of the run.

**\*\* Jetting included with kit**

**\*\*\* See section 5.1.2 for timing recommendations**

## Chapter 4 Preparing for Operation

After you have completed the installation of your NOS Dry Crosshair™ Plate system kit, perform the following checkout procedure before operating your vehicle.

**NOTE:** Before performing steps 1-4, make sure that the nitrous bottle valve is closed and the main nitrous supply line is empty.

1. Turn on the fuel pump.
2. Check all the fuel lines and fittings for leaks.
3. Start the engine.
4. Turn the arming switch on. Set the engine speed at 2000 RPM. Briefly depress the activation arm on the microswitch. Engine speed should decrease if the fuel delivery system is performing properly; if not, refer to Appendix A, Troubleshooting Guide.
5. Open the nitrous bottle valve.

**NOTE:** There should be no change in the engine idle speed. If it does change, refer to Appendix A, Troubleshooting Guide.

6. Inspect the nitrous lines and fittings for leaks.
7. ENJOY!

## Chapter 5 Advanced Tuning for Maximum Power

### 5.1 Optimum Nitrous Jetting

After performing the Baseline Tuning Suggestion—Chapter 3, if you desire to maximize the performance of your system, perform the following:

**NOTE:** Always perform the nitrous jetting modifications listed in Section 5.1.1 before attempting to optimize the ignition timing (Section 5.1.2). Improper nitrous jetting can mislead you when attempting to optimize the ignition timing.

#### 5.1.1 Determining Optimum Nitrous Jetting

The jetting combinations included in your kit are compromises intended to provide you with a safe starting point. They are intended to be used with 950 psi nitrous bottle pressure. Optimum jetting can be determined using the following scheme.

1. Stabilize the nitrous bottle pressure at 950 psi.
2. Perform a dynamometer pull or a full throttle pass down the racetrack. Note the power reading or vehicle mph (not e.t.). Examine spark plugs for the indication of lean or rich nitrous/fuel conditions (refer to Figure 5 for tips on reading the spark plugs).
  - 2A. If spark plugs appear to be excessively rich, adjust the fuel tune up as needed.

2B. If spark plugs appear to be excessively lean, adjust the fuel tune up as needed.

2C. If spark plugs have a “like new” appearance on the porcelain and electrode, do not make a fuel change.

3. Repeat steps 1 and 2 until the desired mixture is obtained.

### How to Read Spark Plugs from a Nitrous Oxide Injected Engine

#### A. Correct Timing, Mixture, and Spark Plug Heat Range

Ground strap retains a “like new” appearance. Edges are crisp, with no signs of discoloration. Porcelain retains clear white appearance with no “peppering” or spotting.

#### B. Excessively Rich Mixture

Porcelain may be fuel stained, appearing brown or black. In extreme cases, ground strap, electrode, and porcelain may be damp with gasoline, or smell of fuel.


#### C. Detonation

Edges of the ground strap may become rounded. Porcelain has the appearance of being sprinkled with pepper, or may have aluminum speckles. During heavy detonation, the ground strap tip may burn off. This phenomena can result from excessive ignition timing, too high a heat range spark plug, or inadequate fuel octane.

#### D. Excessively Lean Mixture

Edges of the ground strap may become rounded. Under moderate overheating, the tip of the ground strap can discolor, usually turning purple, or the entire ground strap can become discolored.

Figure 5 Spark Plug Condition

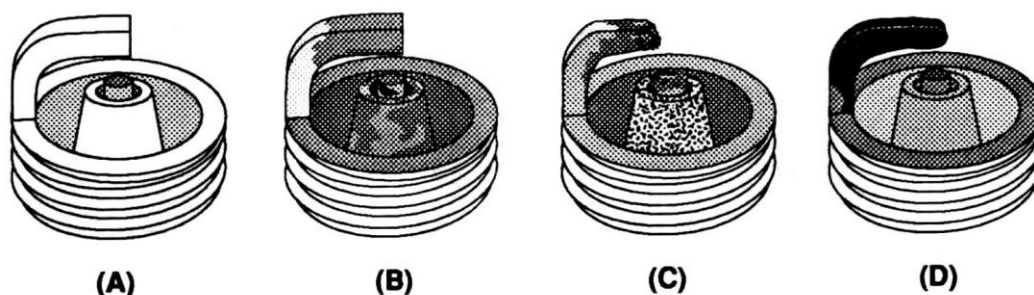

## 5.1.2 Determining Optimum Ignition Timing

Determining the correct ignition timing for an engine using nitrous oxide is not cut and dry as it is dependent on many variables. Variables such as piston design, combustion chamber size and design, valve angle, fuel type, nitrous system design, and other factors all play a critical role as to what timing a specific engine/vehicle combination needs. When running larger amounts of nitrous, it is critical that the proper ignition timing be run as well as the proper spark plug heat range.

There is one specific timing that is most ideal for a specific engine and nitrous tune-up. In the end the best and correct method to determine timing in a car is to read the spark plugs.

Due to all these variables, it is difficult to recommend a generic timing for a given amount of nitrous. However the information below is intended to provide a starting point. After this, it is best to use the spark plugs as an indicator as to what timing a specific engine requires. The spark plugs also will help with nitrous and fuel jetting as well as fuel pressure needs.

One large variable that drives the ideal ignition timing is the “combustion efficiency”. This is a combination of the cylinder head valve angle, combustion chamber size and burn characteristics, and piston dome design among other things. The more efficient the overall combustion efficiency is, the less timing is needed with nitrous. Note that when running large amount of nitrous, the old school rule of “take out two degrees per 50 HP of nitrous” is not ideal or wise.

The following timing recommendations below are based on nitrous HP amounts and a factor called “Combustion Efficiency”. Combustion Efficiency takes into account the piston dome, chamber size, valve angle, and other factors. It is split up into three categories, “High”, “Medium”, and “Low”. The following reviews these:

“High” – An engine with an exceptionally efficient and quick burn rate when running nitrous. Typically this would have a piston with a dish, flattop, or very small, flat dome design. Combustion chambers are small and valve angles are greatly reduced from the “factory” valve angle. Generic examples are engines with current high end race heads that have valve angles reduced 7-11 from stock, very small combustion chambers, and flat top piston that still maintain 13-14:1 compression ratios.

“Medium” – An engine with a small and efficient chamber. An example could be a SBC with an 18 degree head with a moderate piston dome.

“Low” – Older engines with factory valve angles. Pistons may have large domes to maintain high compression ratios. Large, open combustion chambers. An example would be a BBC engine with a 119cc open chamber and large dome piston.

The following are some initial recommendations for timing. Be conservative and read your plugs. Run an 1/8<sup>th</sup> mile hit rather than a ¼ mile pass to start to see initial plug strap readings. The “Plug” recommendation is based on NGK heat ranges. An equivalent Autolite or other brand can be used.

**Table 5 Suggested Baseline Timing Combinations**

Nitrous HP	Combustion Efficiency	Timing	NGK Spark Plug or Equiv.	Fuel/Octane
100	Low	32	Stock	93+
100	Medium	30	Stock	93+
100	High	28	Stock	93+
125	Low	31	Stock/-7	100+
125	Medium	29	Stock/-7	100+
125	High	27	Stock/-7	100+
150	Low	29	-8	100+
150	Medium	27	-8	100+
150	High	25	-8	100+
175	Low	27	-9	110+
175	Medium	25	-9	110+
175	High	23	-9	110+
200	Low	24	-9	110+
200	Medium	22	-9	110+
200	High	20	-9	110+
250	Low	22	-10	112+
250	Medium	20	-10	112+
250	High	18	-10	112+
300	Low	20	-11	114+
300	Medium	18	-11	114+
300	High	16	-11	114+
350	Low	18	-11	114+
350	Medium	16	-11	114+
350	High	14	-11	114+
400	Low	16	-11	116+
400	Medium	14	-11	116+
400	High	12	-11	116+
500	Low	12	-11	116+
500	Medium	10	-11	116+
500	High	8	-11	116+
600	Low	8	-11	116+
600	Medium	6	-11	116+
600	High	2	-11	116+

## Chapter 6 Routine Maintenance

### 6.1 Nitrous Solenoid Filter

When nitrous bottles are refilled they can become contaminated with debris, if the refiller does not have an adequate filter in his transfer pump mechanism. Contaminants in the bottle will eventually become lodged in the nitrous solenoid filter fitting.

You should periodically (after every 20-30 pounds of nitrous usage) examine the mesh in the nitrous filter for debris.

To clean the filter, follow these steps:

1. Close the valve on the nitrous bottle. Empty the main nitrous feed line.

2. Disconnect the main nitrous feed line from the nitrous solenoid.
3. Remove the nitrous filter fitting from the nitrous solenoid.
4. Remove **all** PTFE paste debris from the solenoid inlet port threads and from the nitrous solenoid filter pipe threads.
5. Examine the mesh in the nitrous filter fitting for contaminants. Blow out debris with compressed air, if necessary.
6. Apply fresh PTFE paste to the nitrous filter pipe threads. Reinstall the filter in the nitrous solenoid.
7. Reconnect the main nitrous supply line to the nitrous solenoid.

## 6.2 Nitrous Solenoid Plunger

### 6.2.1 General Information

The seals used in NOS nitrous solenoid plungers are constructed from materials, which are designed to be used with nitrous oxide. When kept free from fuel contaminants or from overpressurization, they should provide trouble free performance.

You should periodically (after every 20-30 pounds of nitrous usage) examine the seal in the nitrous solenoid plunger.

The seals used in NOS nitrous solenoid plungers are designed to work at pressures up to 1100 psi. Exposing the plunger to excessive pressure (whether the vehicle is sitting or in-use) can result in the seal in the plunger swelling or in extreme cases disintegrating.

**NOTE:** The seals are designed so that if they fail due to overpressurization, they will not leak, the valve will just fail to flow nitrous oxide.

Swelling of the nitrous solenoid plunger seal will reduce nitrous flow (causing an excessively rich nitrous/fuel condition and a loss of power).

### 6.2.2 Nitrous Solenoid Plunger Disassembly and Inspection

1. Close the valve on the nitrous bottle.
2. Empty the main nitrous supply line.
3. Remove the retaining nut from the nitrous solenoid.
4. Remove the coil and housing from the nitrous solenoid base.
5. Unscrew the stem from the nitrous solenoid base. Do this by double nutting the stem, or by using a solenoid stem removal. **Do not use pliers on the solenoid stem. Damage to the stem will result.**
6. Remove the stem, spring, and plunger from the solenoid base.
7. Examine the plunger seal for swelling. The seal surface should be flat, except for a small circular indentation in the center of the seal.

A fuel-contaminated seal will protrude from the plunger and be dome-shaped. A fuel-contaminated seal may return to its original shape if left out in the fresh air for several days. It may then be returned to service.

A seal, which has been overpressurized, may be dome-shaped, or the sealing surface may be flat with the seal protruding out of the plunger. A dome-shaped seal may return to its original shape if left out in the fresh air for several days. It may then be returned to service. A seal, which is flat, but protrudes from the plunger body has probably failed internally and should be replaced.

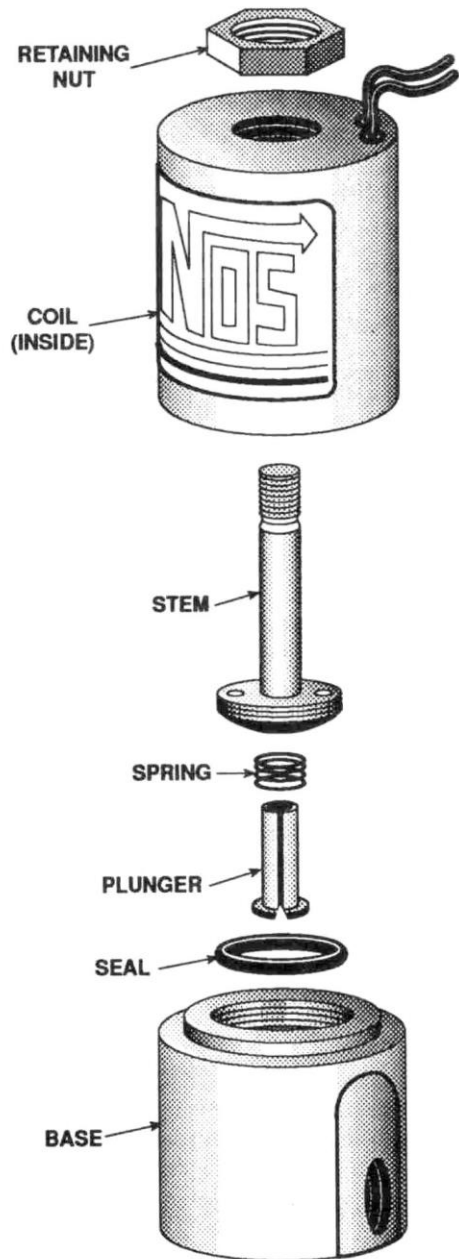


Figure 6 Exploded View of a Typical Solenoid

## Appendix A Troubleshooting Guide

The troubleshooting chart on the following pages should help determine and rectify most problems with your installed NOS system. If you still need assistance determining or fixing problems, call the NOS Technical Support at 1-866-464-6553.


PROBLEM	POSSIBLE CAUSES	DIAGNOSTIC PROCEDURE	CORRECTIVE ACTION
No change in engine speed when the fuel solenoid is activated (Preparing for Operation—Chapter 4).	System wired incorrectly.	Compare wiring to schematic (Figure 3).	Wire per instructions.
	Restricted fuel line.	Inspect fuel line for restrictions (crimped or plugged).	Remove restrictions.
	Malfunctioning fuel solenoid.	Turn arming switch ON. Activate microswitch. Solenoid should make “clicking” noise.	Repair/replace solenoid.
Change in engine speed when nitrous bottle valve is opened (Preparing for Operation—Chapter 4).	Malfunctioning nitrous solenoid.	Remove and inspect solenoid.	Repair/replace solenoid.

Engine runs rich when system is activated.	Bottle valve not fully opened.	Check bottle valve.	Open valve fully.
	Bottle mounted improperly.	Check bottle orientation.	Mount bottle properly.
	Plugged nitrous filter.	Inspect filter.	Clean/replace filter.
	Low bottle pressure.	Check bottle temperature.	Set bottle temperature to 80° to 85°F.
	Inadequate nitrous supply.	Weigh bottle.	Fill bottle. 1-800-99-REFILL
	Loose nitrous solenoid wiring.	Inspect the solenoid wiring.	Repair wiring.
	Malfunctioning nitrous solenoid.	<b>WARNING:</b> <i>Solenoid discharges nitrous at a high rate. Don't inhale nitrous; death may occur. Skin contact may cause frostbite.</i> Close bottle valve. Disconnect the nitrous solenoid outlet port. Disconnect the solenoid (+) lead. Open the nitrous bottle valve. Briefly connect the +12V to the solenoid. Solenoid should discharge N <sub>2</sub> O at a high rate.	Rebuild solenoid.
	System wired incorrectly.	Compare nitrous wiring to schematic (Figure 3).	Wire system per instructions.
Loose ground wire(s).	Connect 12V test light to battery (+) terminal. Check for continuity at grounds noted in schematic.	Tighten/repair loose grounds.	
No change in performance when system is activated.	Malfunctioning arming switch.	With vehicle ignition ON, turn arming switch ON. Connect 12V test light to battery (-) terminal. Check for power at red wire on arming switch.	Replace arming switch.
	Malfunctioning throttle microswitch.	Turn arming switch OFF. Close throttle microswitch. Check for continuity between microswitch wiring terminals.	Replace throttle microswitch.
	Overly rich fuel condition.	Check for black smoke or backfiring through exhaust with system activated.	Install smaller fuel jet or decrease fuel pressure.

## Nitrous Oxide Accessories

NOS systems are calibrated for optimum performance with a bottle pressure of 950-1000 psi. The pressure will change with temperature. Heater kits are pressure-controlled to keep the bottle near 975 psi to provide optimum performance. **Bottle Heater (P/N 14169NOS -4AN)** is available for 10 & 15 lb. bottles.

**Nitrous Bottle Kits (P/N 14761NOS, 14763NOS, & 14765NOS)** are a necessity to finish off your plate kit. They are available in 10lb, and 15lb blue bottles, and 12.8lb carbon fiber bottle kits. Each kit includes Bottle, Brackets, Feed line, bottle nut, and PTFE Washer.

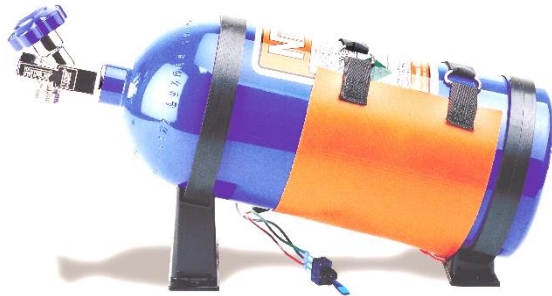

P/N 14169NOS



P/N 14765NOS

The primary purpose of a **Purge Valve (P/N 16032NOS -6AN)** is to release trapped air or gaseous nitrous from the feed line(s). This helps to ensure consistent performance. And, purging looks cool too! We now have an **LED purge kit (P/N 16033NOS-4AN)**!



P/N 16033NOS



P/N 15975NOS

The **Launcher Progressive Controller (P/N 15975NOS)** is a necessity when it comes to putting the power to the ground. It is available as a fully programmable unit that is capable of handling up to 4 stages of independent nitrous control all while using a small touch screen.

## NOS Technical Support

Phone: 1-866-464-6553

For online help, please refer to the Tech Service section of our website:

[www.holley.com](http://www.holley.com)

© 2018 Nitrous Oxide Systems, Inc. All rights reserved.

199R10932

Date: 2-23-18