


# Holley Sniper EFI Injector Tuning Guide

This guide is to help with finding the correct things to adjust when installing our injectors into these TBI units.


1. Power on the vehicle and get to the home screen. Then click on Tuning. Select System.



2. Select Sniper Setup and then select Fuel injector flow.

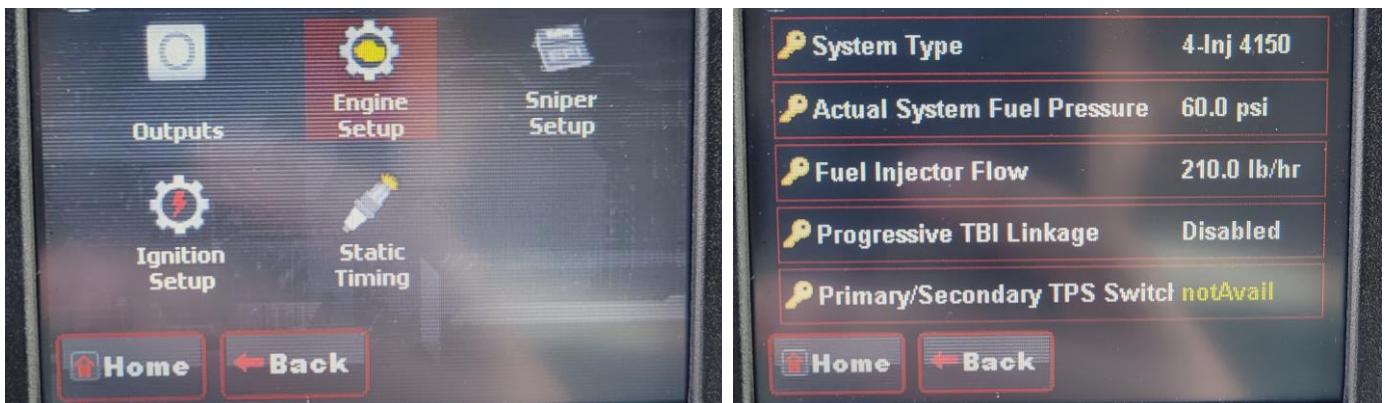

- Slide the Injector to the designated flow rate at 58 psi. Listed in the Holley Terminator Data in the link below.  
<https://deatschwerks.com/pages/stand-alone-calibrations>

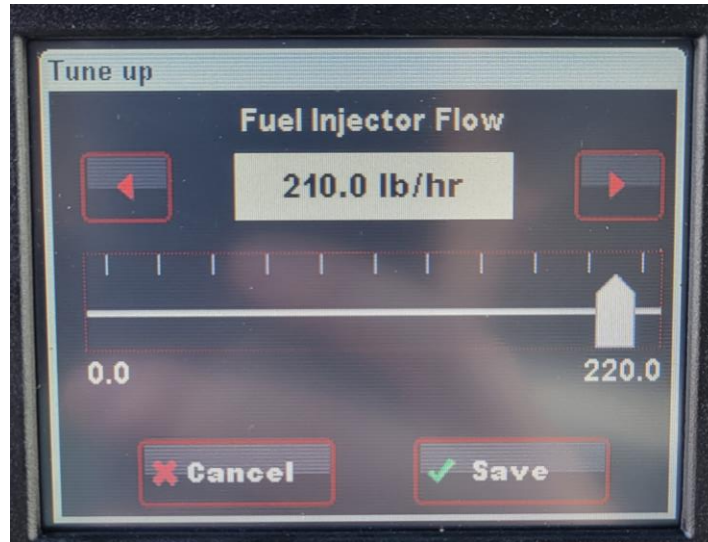

- After the flowrate has been input the vehicle will need to be driven to relearn each condition as the injector characteristic will have changed. This should allow for the vehicle to be started and driven in low load conditions until the ecu has fully relearned.

For additional technical support please contact us at: [TechSupport@Deatschwerks.com](mailto:TechSupport@Deatschwerks.com) or 405.233.3991