

# Installation Instructions


## For set # 11-3102 86-91 Mazda RX-7

**ENERGY SUSPENSION**  
 1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2002 Energy Suspension. All rights reserved.  
 May not be reproduced, in any form, or by any means,  
 without the written consent of Energy Suspension.

Updated 15/FEB/02 BRH

171124

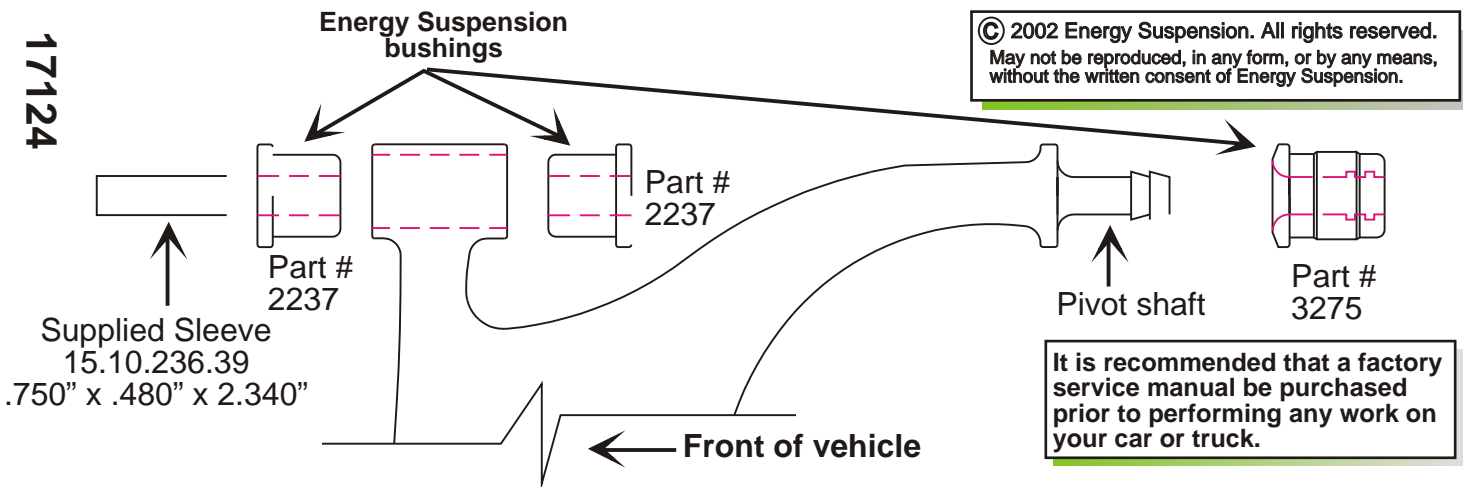

It is recommended that a factory service manual be purchased prior to performing any work on your car or truck.

1. Remove the front control arm from the vehicle.
2. Press out the front bushing from the control arm being careful not to scar the I.D. of the control arm.
3. On the rear pivot bushing, cut back the rubber exposing the steel tube bonded in the bushing. Cut the steel sleeve and pry the bushing off the control arm pivot shaft. **Caution:** Use extreme care not to scar the aluminum control arm pivot shaft. After removal, deburr all sharp edges.
4. Grease all surfaces that contact metal. Press the urethane bushings into the barrel of the control arm. Thoroughly grease the supplied sleeve with the supplied grease and press the sleeve into the bushing. Grease all remaining exposed parts of the bushing thoroughly.
5. Grease the pivot shaft of the control arm and the inside of the urethane bushing. Slide the urethane bushing over the end of the pivot shaft.
6. Reinstall back onto vehicle.
7. Torque all fasteners to factory specs.

# Installation Instructions


## For set # 11-3102 86-91 Mazda RX-7

**ENERGY SUSPENSION**  
 1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2002 Energy Suspension. All rights reserved.  
 May not be reproduced, in any form, or by any means,  
 without the written consent of Energy Suspension.

Updated 15/FEB/02 BRH

171124

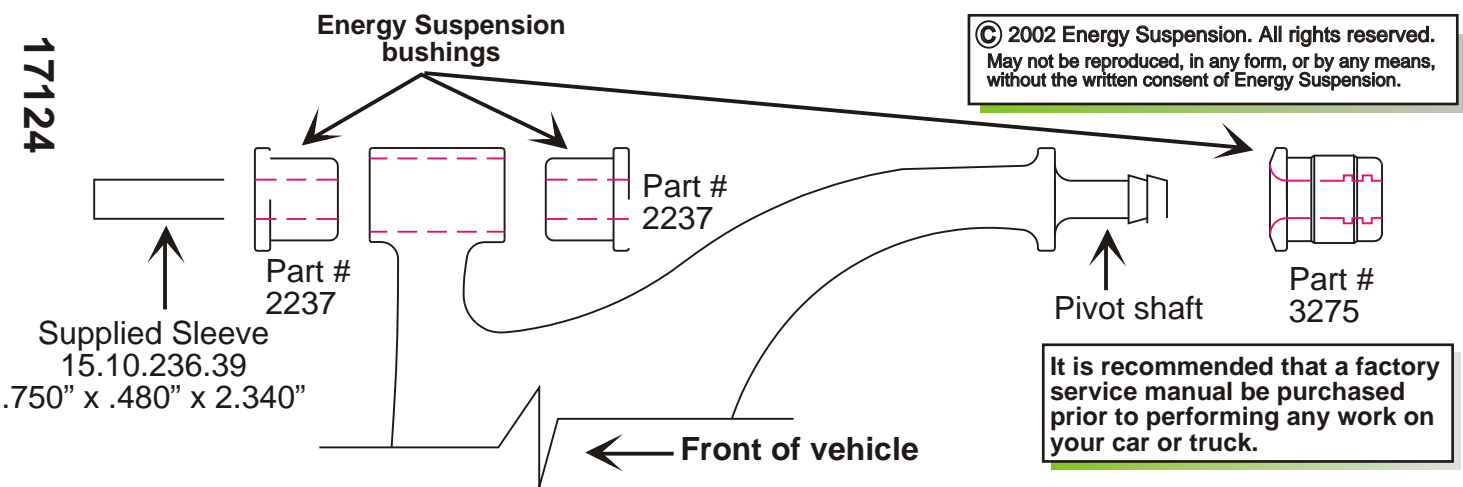

It is recommended that a factory service manual be purchased prior to performing any work on your car or truck.

1. Remove the front control arm from the vehicle.
2. Press out the front bushing from the control arm being careful not to scar the I.D. of the control arm.
3. On the rear pivot bushing, cut back the rubber exposing the steel tube bonded in the bushing. Cut the steel sleeve and pry the bushing off the control arm pivot shaft. **Caution:** Use extreme care not to scar the aluminum control arm pivot shaft. After removal, deburr all sharp edges.
4. Grease all surfaces that contact metal. Press the urethane bushings into the barrel of the control arm. Thoroughly grease the supplied sleeve with the supplied grease and press the sleeve into the bushing. Grease all remaining exposed parts of the bushing thoroughly.
5. Grease the pivot shaft of the control arm and the inside of the urethane bushing. Slide the urethane bushing over the end of the pivot shaft.
6. Reinstall back onto vehicle.
7. Torque all fasteners to factory specs.