


Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved. May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

12/NOV/13 BRH
17301

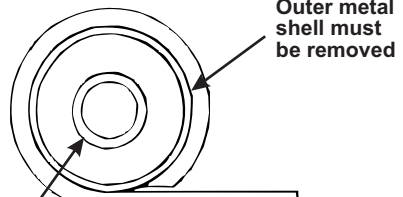

Note: inner metal sleeve may be supplied on some sets. If not supplied reuse O.E.M. sleeve.

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.

When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)


Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved. May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

12/NOV/13 BRH
17301

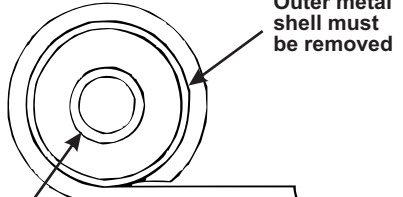

Note: inner metal sleeve may be supplied on some sets. If not supplied reuse O.E.M. sleeve.

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.

When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)


Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved. May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

12/NOV/13 BRH
17301

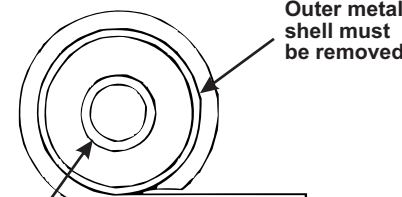

Note: inner metal sleeve may be supplied on some sets. If not supplied reuse O.E.M. sleeve.

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.

When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)


Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved. May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

12/NOV/13 BRH
17301

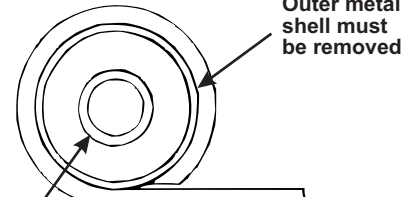

Note: inner metal sleeve may be supplied on some sets. If not supplied reuse O.E.M. sleeve.

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.

When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)