



**DINAN**


**REAR SHOCK ABSORBER  
INSTALLATION NOTES**

PART NUMBER DI40-0946

APPLICATION:	2006	325i, 330i (E90)
	2007-10	328i (E90, E92, E93)
	2007-10	335i/xi (E90, E92)
	2011	335is (E92; w/ N54 engine)
	2011	335i (E90, E92; w/ N55 engine)
	2008-10	135i (E82)

Congratulations for being selective enough to use a Dinan Engineering shock absorber. We have spent many hours developing our suspension components to assure that you will receive maximum performance and durability with minimum difficulty in installation. Please take the time to read these notes and call us if you have any difficulties during the installation.

- **DO NOT WORK ON VEHICLES SUPPORTED BY A JACK ONLY. USE SECURE JACK STANDS!**
- The shock has already been preset to Dinan's recommended setting for this application. If further adjustment is necessary, please refer to the separate Koni instructions for the adjustment procedure.
- In order to incorporate the external adjustment feature, the shock shaft is larger in diameter than stock. Some of the BMW upper shock mount components will no longer fit, and must be replaced with corresponding components included with these shocks. Refer to the following diagram for the proper assembly order.
- The BMW upper guide support contains a section of foam glued to a steel washer & locknut. Using a razor blade or similar tool, separate the foam from the washer.
  - The foam will be reused.
  - The washer & locknut will be discarded.
- Remember to install the bumpstop & cover before assembling upper shock mount!

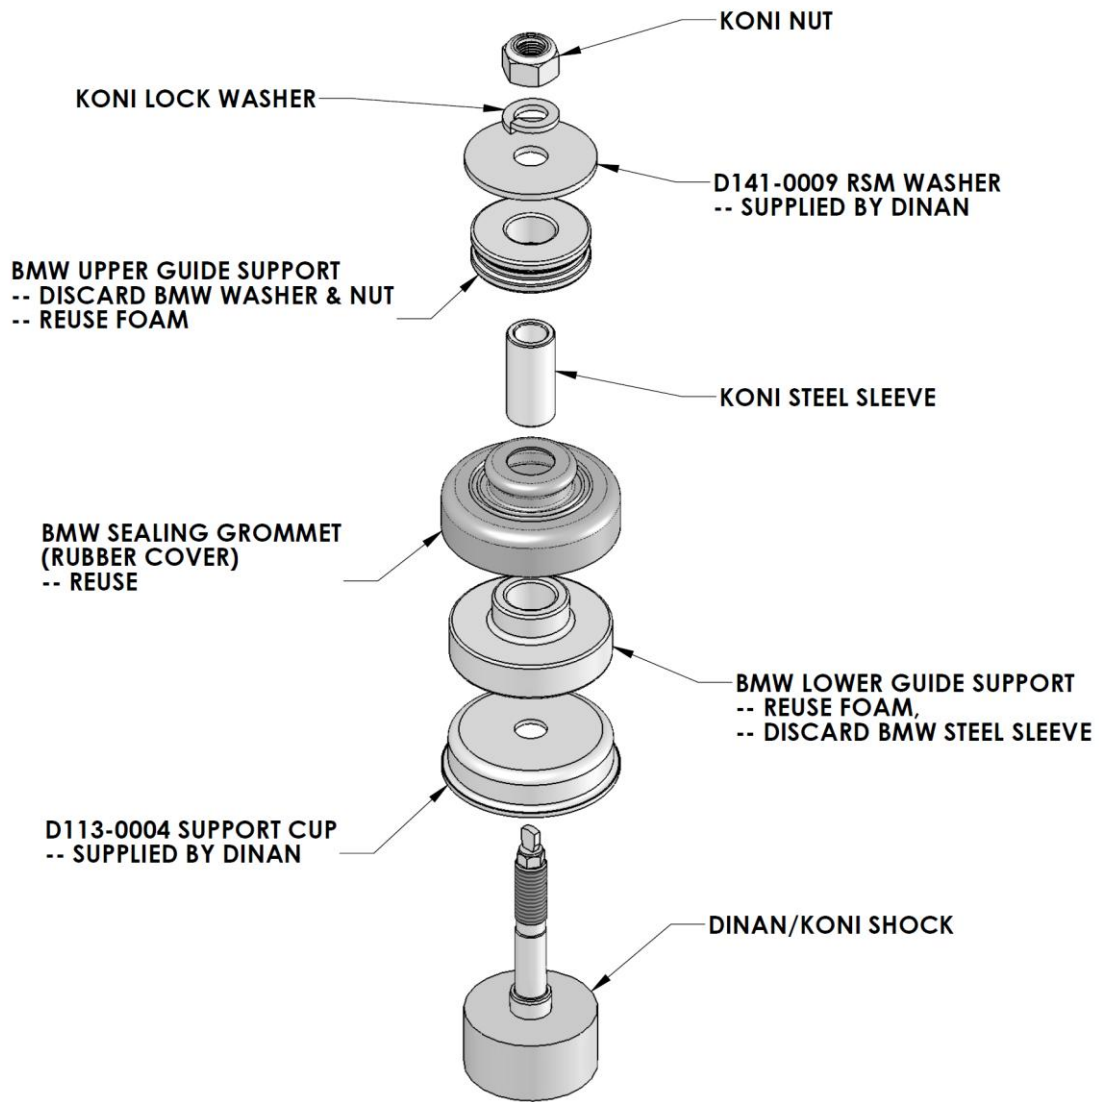

**BUMPSTOP NOT SHOWN FOR CLARITY**