



Part number SES5007
2020-23 Jeep Gladiator
JT 3.6L V6
Cat-Back Exhaust System

- 1- 3 piece Cat Back Exhaust**
- 2- #76 Torsion Clamp (#4015)**
- 1- 1 page instruction**



Congratulations! You have just purchased the best engineered, dyno-proven exhaust system available.

Please check the contents of this box immediately.

Report any defective or missing parts to the Authorized Injen Technology dealer you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the dealer you purchased this product from.

Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

*Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

Injen Technology offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

Injen Technology 244 Pioneer Place Pomona, CA 91768 USA

Please check the contents of this box immediately.
Parts and accessories are available on line at "Injenonline.com"

NOTE: All Injen exhaust systems are engineered to comply with the 95dB noise limit law specified by the California Highway Patrol and the Society of Automotive Engineers - Except ones that are designated for "Off-Road Use only".

Every Injen exhaust system is individually designed for a specific application and complies with the requirements of Sections 27150, 27151 & 27200 of the California Vehicle Code and Title 13 of the California code of Regulations, Section 10361, which establishes a noise limit of 95dB for passenger cars.

The age of your exhaust system along with certain engine modifications, such as headers, intake, etc., may also affect its current noise level output.

Please check with your local and state law enforcement agencies for exact regulation requirements.



Figure 1

Remove the factory exhaust, loosen all bolts on the OEM exhaust. Remove the mid support brace of the vehicle. Loosen and remove the spare tire, loosen and remove the exhaust tire heatshield. Remove the factory exhaust system. Install the new injen exhaust. Re-use the OEM clamp on the cat side. Position injen exhaust and adjust. Position hangers on exhaust to the factory isolators.

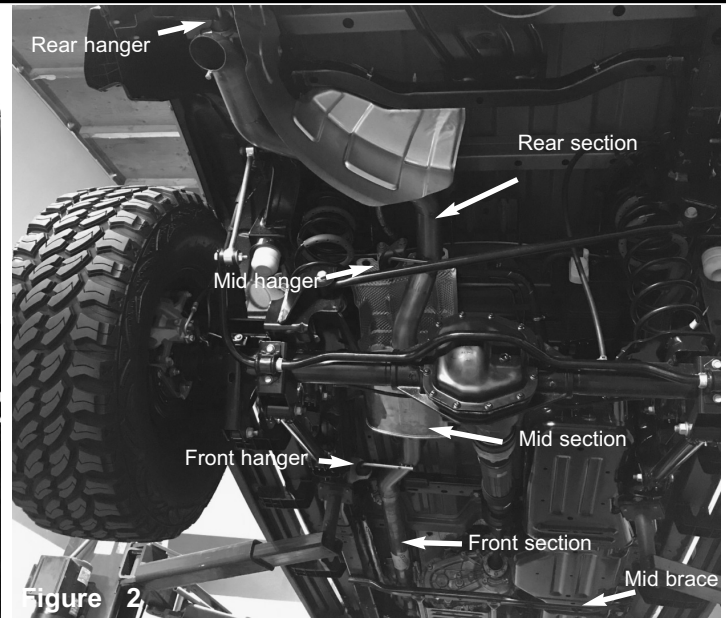


Figure 2

Make sure the hangers are installed to the isolators. Position for the best fit. Rotate if necessary. Tighten the torsion clamps using 17mm socket and ratchet. Re-tighten after 50miles and verify the clamp is secured. Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the exhaust. **Note: Check clearance and adjust if needed! Failure to check the alignment and adjust the exhaust can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.**