



INSTALLATION GUIDE

2015+ VW Golf 1.8T Track / Touring Edition Exhaust System

Congratulations on your purchase of the AWE Tuning Track or Touring Edition Exhaust System for the 2015+ VW Golf 1.8T.

Exquisite build quality with industry leading performance distinguishes this exhaust system from all others.

Contact us with any installation questions.

215-658-1670

AWE-Tuning.com

performance@AWE-Tuning.com

Touring Edition

- 1 resonated front section (part RN)
- 1 mid-muffler (part SR)
- 1 outlet tube (part ST)
- 1 tip section (part SY)
- 2 90mm exhaust tip (choice of color)
- 3 63.5mm Accu-Seal clamp
- 2 hanger lock collar
- 1 allen wrench

Track Edition

- 1 non-resonated front section (part R0)
- 1 mid-muffler (part SR)
- 1 outlet tube (part ST)
- 1 tip section (part SY)
- 2 90mm exhaust tip (choice of color)
- 3 63.5mm Accu-Seal clamps
- 2 hanger lock collar
- 1 allen wrench

Step 1

Remove the factory cat back exhaust system.

If you intend to install an AWE Tuning Performance Downpipe or any other brand downpipe at the same time as your cat back exhaust system, it is recommended that you install the downpipe first to make cat back alignment easier.

Mate the AWE Tuning exhaust to the downpipe, re-using the factory sleeve clamp.

Note: the driver's side rear muffler hanger must be rotated 180 degrees so that the rubber hanger is on the outside of the exhaust.

Step 2

Assemble AWE Tuning exhaust on the car, using the supplied 63.5mm Accu-Seal clamps at each slip joint. Leave the clamps loose until adjustments are complete.


Install supplied exhaust tips, using the supplied hardware. Adjust rear tip outlet section so that tips are properly centered in valance openings. Center the exhaust tips in the valance cut outs by sliding the entire exhaust system left or right on the factory rubber hangers.

Once tips are centered tighten down all Accu-Seal clamps to 40 ft/lbs. Rotate and adjust tip depth then tighten down fully.

Step 3

Once the exhaust system is properly adjusted, install a hanger post clamp on the rear muffler hanger post, as shown at arrow in **Figure 1**. Slide the clamp onto the hanger post so that it sits snug against the rubber element, and then tighten down with the enclosed allen wrench.

This clamp will keep the exhaust from sliding laterally under usage and will keep the tips properly aligned in the valance openings.

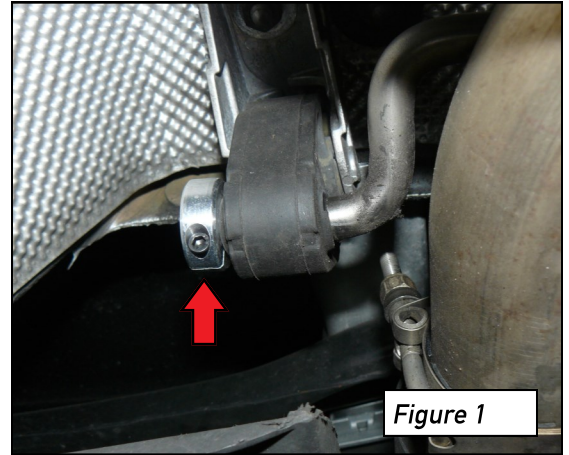

ENJOY

Periodic cleaning of exhaust tips is necessary to maintain proper finish, especially in areas prone to road salt and caustic deicing solutions.

Do NOT use metal polish on our Diamond Black or Chrome finish tips. Instead, use a mild soap and water solution or gentle car wax periodically to clean the finish.



Any questions or comments,
please do not hesitate to contact us:
215-658-1670
AWE-Tuning.com
performance@AWE-Tuning.com



AWE Tuning
199 Precision Drive
Horsham, PA 19044
215-658-1670
performance@AWE-Tuning.com

Thank you for choosing AWE Tuning as your performance automotive parts supplier. Please remember that a performance car is only as strong as its weakest link. Therefore, it is vital that you maintain your vehicle to factory specifications.

By installing or using the purchased product, the Consumer accepts this warranty and any specific Manufacturer warranties enclosed.

Limited Warranty

The following warranty is valid only in the United States.

The Manufacturer's full warranty applies to all products sold.

Secor Ltd. (AWE Tuning) warrants to the original retail purchaser (Consumer) this product:
MK7 Golf 1.8T Track Edition and Touring Edition Exhaust
against manufacturing defects from date of original purchase for:
ONE YEAR on tip finish, LIFETIME on balance of parts.

Upon verification of warranty coverage, AWE Tuning will repair or replace the defective product at their discretion, without charge. This is the only remedy the Consumer has for any loss or damage, however arising, due to nonconformity in or defect of the product. This warranty does not cover consequential damage, loss of time or revenues, labor costs, shipping costs, inconvenience, loss of use of vehicle, damage to the vehicle or components, or other incidental or indirect damage.

All warranties are void if the product was not installed by a certified auto mechanic, improperly serviced, modified, or used in a way not intended by the Manufacturer. Use of product in Motorsports or Racing conditions is grounds for warranty denial. Motorsports and Racing is an inherently abusive operational condition, and it is impossible to warranty for this type of usage.

The Consumer is responsible for ensuring that the product is installed in a safe and proper manner, and should cease usage of the product immediately if an unsafe or improper condition is noted. If an unsafe or improper condition is noted, the Consumer should then immediately contact the facility where the product was installed or AWE Tuning directly.

Please contact the original place of purchase for any warranty claims or explanations of this document.