

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified Powersports technician.

DESCRIPTION: Heat Shield Kit Complete

PART NUMBER: 902491 / 10885

APPLICATION(s): Can Am Maverick XC 2-Seater

KIT CONTENTS:

Heat shield set A-L QTY 12 Pieces

Reflect-A-Cool tape QTY 1

TOOLS NEEDED: Contact cleaner, flat screw driver, T25, T27, T30 Torx drivers, scissors, tape, silicone, or glue.

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.

OVERVIEW: A 12 piece heat shield kit to help reduce cockpit heat on the Can-Am® Maverick™. Each shield is labeled for its location.

1. Remove seats, (see owners manual)
2. Remove Torx fasteners and rivets on the instrument panel and slide forward in order to remove the center console. Fig. 1
3. Remove grab handle and unscrew the gear selector knob from the center console. Fig. 1
4. Remove plastic rivets using a panel tool or flat screw driver on the center console. Fig. 2
5. Remove remaining Torx fasteners and plastic rivets on the both side console panels. Fig. 2
6. Remove Torx fastener and 10mm nut for side netting frame anchor (A) along with plastic rivets on the clutch assembly cover. Fig. 2



Fig. 1



Fig. 2



Fig. 3

7. Once panels are removed, peel away any existing stock foam. You may have to use contact cleaner to remove the adhesive. Fig 3.

8. Peel and stick insulation pieces into place. It is easiest to peel only a small portion of backing away from material, get it in place, then slowly peel away the rest of the backing as you press the piece in place. Fig 4.

9. Use supplied Reflect-A-Cool tape to cover sharp edges and seams. See parts diagram (back) for correct placement.


10. Note: to reinstall side netting anchor, place some tape around the nut and silicone on the washer in order to keep it stationary in the wrench. Fig. 5




Fig. 4



Firewall

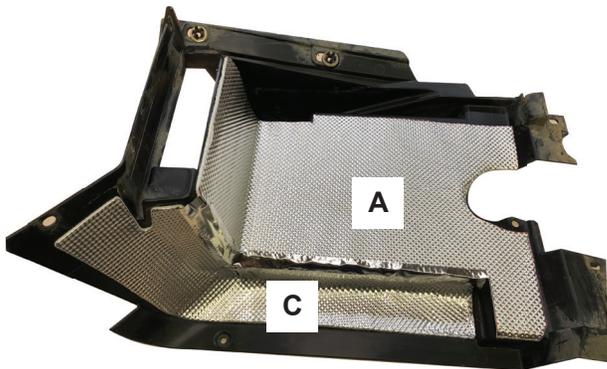

Lower Clutch Cover

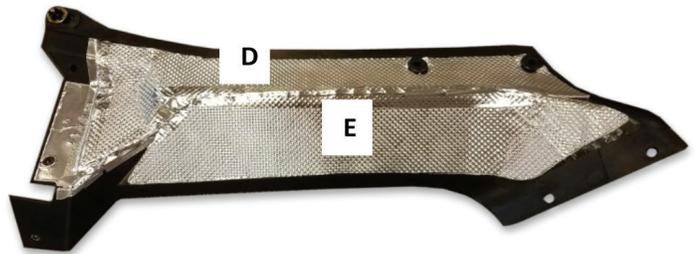


Console - Drivers Side



Console - Center



Console - Passenger Side

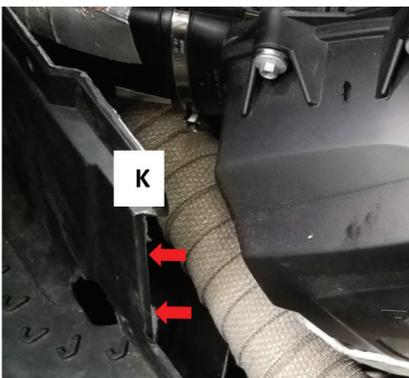

Drivers Side Footwell



Fig. 5

902491 / 10885 Can Am Maverick XC 2-Seater Piece Diagram

