

INSTALLATION INSTRUCTIONS

Jeep JL Side Window Kit

KIT CONTENTS:

LEATHER LOOK FINISH

- 50271 Jeep JL 2dr 2018-UP Grey Leather Look
- 50272 Jeep JL 2dr 2018-UP Black Leather Look

ORIGINAL FINISH

- 50268 Jeep JL 2dr 2018-UP Black
- 50269 Jeep JL 2dr 2018-UP Grey
- 50270 Jeep JL 2dr 2018-UP White

TOOLS:

Use manufacturer's suggested tools for hardtop removal.

NOTES: This kit is designed to fit Jeep Wrangler JL equipped with factory hardtops. We suggest you remove the hardtop from vehicle and place on the floor in an inverted position. Placing the hardtop on a blanket is recommended to protect it from scratches. Test fit the parts in place with the paper release liner left in place to note its position and where it will be installed. Once the adhesive contacts a clean surface, it is extremely difficult to remove the adhesive. Be sure the part is in the desired position before adhering it!

SURFACE PREP:

Vacuum or wipe down installation area to remove all loose debris/dust. Then clean with isopropyl alcohol to remove any contaminants.

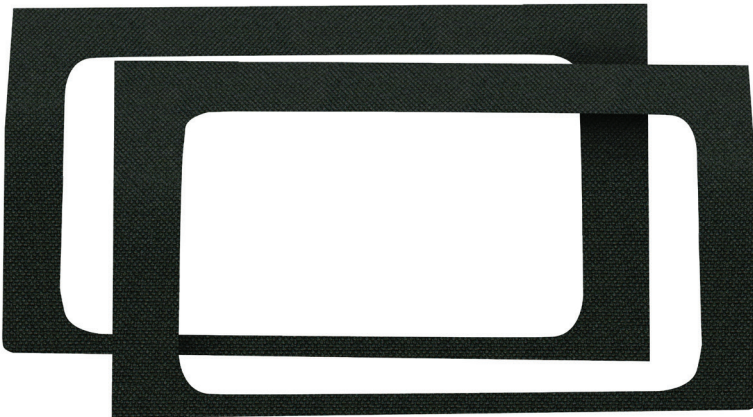


Figure 1

1.) Remove the hardtop from vehicle following the manufacturer's suggested removal procedure. Placing the hardtop on a blanket is recommended to protect it from scratches. Make sure to place the hardtop on the blanket in an inverted position.

2.) Once the hardtop is removed, clean the surface with isopropyl alcohol. This ensures a good adhesive bond between the window kit and the hardtop. *Note: The adhesive will not stick properly to a dirty surface.

3.) Test fit to determine the correct placement for each side. (Figure 1)



Figure 2

4.) Peel paper backing slowly and press fit piece as you pull backing off.
(Figure 2)



Figure 3

5.) Firmly press window trim piece in place after entire backing is removed to ensure a tight bond on entire piece. (Figure 3)

6.) Reinstall the hardtop according to the manufacturer's suggested installation procedure.



www.BoomMat.com