


INSTALLATION INSTRUCTIONS

Arctic Cat Wildcat 1000

PART #902405

Trim Panel
Rubber Boot shield
4 push pins

NOTES:

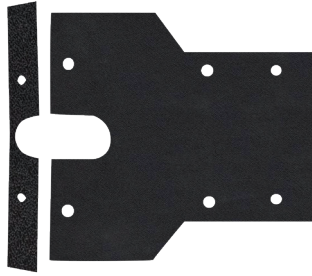

SURFACE PREP:

Vacuum or wipe down installation area to remove all loose debris/dust. Then clean with isopropyl alcohol to remove any contaminants.

TOOLS:

Drill Motor
1/4" drill bit
Torx Driver
Marker

1. Tilt steering column to its lowest position (Fig. 1)

2. Using the Torx driver remove the two torx screws just below the gauges on either side of the steering column (Fig 2 & 3)



Figure 1



Figure 2



Figure 3

4. Take the rubber boot shield and position it around the column lining the holes up with the screws that were just removed. Make sure the slit is around the tilt lever.(Fig. 4)



Figure 4

5. Using the supplied black plastic Trim panel, install the factory screws that were removed in step two and install the panel with the rubber shield in between and tighten screws.(Fig. 5 & 6)



Figure 4



Figure 6

6. Raise the steering column to its highest position. Holding the rubber boot in place under the column, mark the location for the 4 push pins using the marker. (Fig. 7 & 8)



Figure 7



Figure 8

7. Drill four 1/4" holes for the push pins, then install the pins through the rubber boot into the holes. (Fig. 9 & 10)

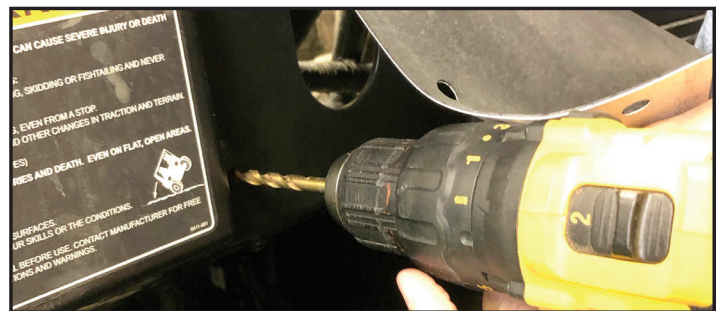


Figure 9

8. Move the column up and down to make sure you have free movement and no binding



Figure 10