

Installation Instructions for Set # 16-3114




1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

1. Properly support the vehicle on the frame. Remove the upper control arm assembly from the vehicle (see diagram).
2. Remove the rubber bushing ,DO NOT REMOVE O.E. OUTER METAL SHELL FROM UPPER CONTROL ARM. Grease all sides of the bushing that contact metal. Press in the Energy Suspension bushing. Note: On the upper control arm, the bushings have a part number engraved in them. The engraved side on each bushing must be facing away from each other. (see diagram). Grease and install the sleeve.
3. Reinstall the upper control arm assembly onto the vehicle.
4. Unbolt the rear mount from the lower control arm. Remove the rubber bushing and sleeve from the mount. Remove the lower control arm. Press out the rubber bushing and shell (front position) from the control arm.
5. Grease the I.D. of the lower control arm (where the shell was). Grease all sides of the bushing that will contact metal.
6. Install the bushings. The rear mount bushing needs to be installed so that the part number engraved on the bushing is facing toward the rear of the vehicle. (See diagram). Grease the I.D. of bushing, sleeve and, inner face of washer.
7. Reassemble the control arm onto the vehicle. Tighten all fasteners to factory specs.
8. After installation is complete, Energy Suspension recommends an alignment be performed at a qualified alignment shop.

Other Energy Suspension Sets Available for this Vehicle:

| | |
|----------|----------------------------------|
| 16-7106 | Rear trailing arm bushing set |
| 16-8102 | Front shock bushing set |
| 16-8104 | Front end links |
| 16-13101 | Ball joint boot set |
| 9-13103 | Tie-rod boots |
| 16-1102 | Manual trans. shifter stabilizer |
| 16-5121 | Front sway bar bushings (22mm) |

© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

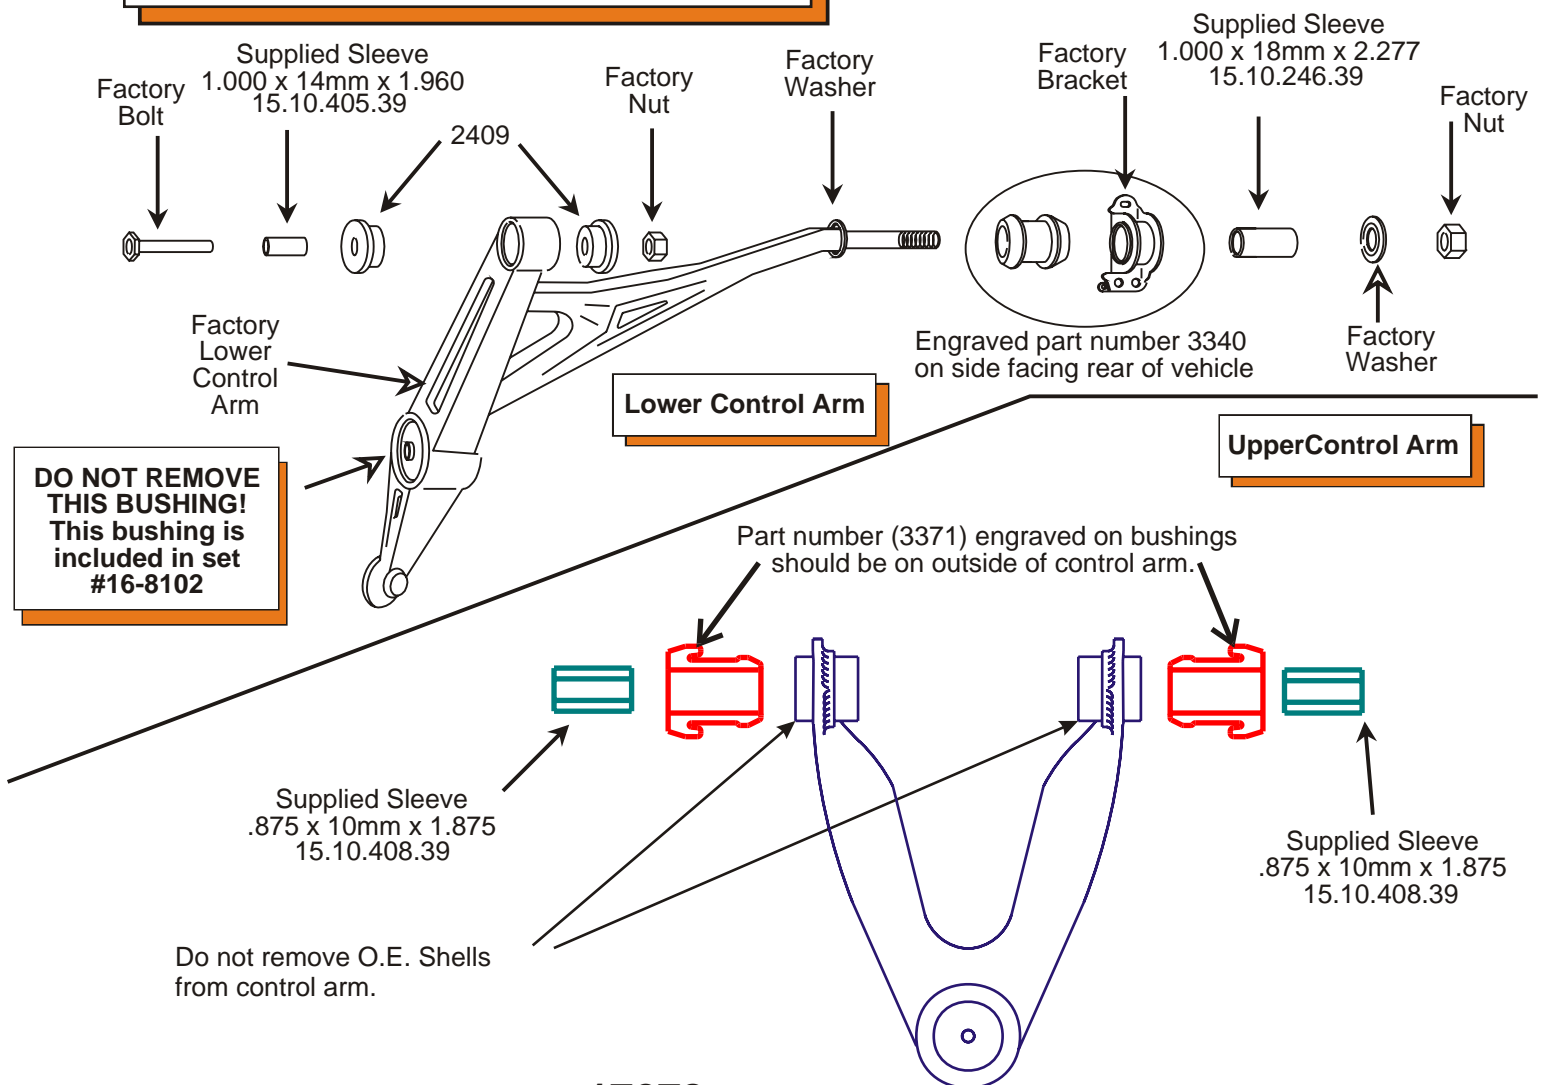

17278

31/MAR/00 BRH