

# Installation Instructions Set # 18-3101


Read instructions carefully before beginning

**ENERGY**  
**SUSPENSION**®

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

**This kit contains parts with one or more of the following patents, 5472226 & 5275429**

1. Loosen and remove the sway bar pivot bushings and brackets. If you purchased a master set or kit number 18-5101 you may refer to this installation now..
2. Loosen and remove the hardware from the rear of the sway bar / strut rod.
3. Loosen and remove the inner pivot bolt etc. and remove the lower control arm from the vehicle.
4. Remove the strut rod bushings and discard.
5. **DO NOT DESTROY OR DISCARD THE INNER SLEEVE AS YOU MUST REUSE IT.**
6. **DO NOT REMOVE OR DESTROY THE METAL SHELL THAT CONTAINS THE PIVOT BUSHING.**
7. Remove the pivot bushing from the control arm.
8. Clean inside of shell thoroughly to remove any old bushing material.
9. Lubricate all surfaces of bushing that contact metal and insert pivot bushings p/n 3397, 2463 & 3398 as shown in diagram.
10. If you purchased the Master Set or kit number 9-13101, you may refer to that installation now.
11. Lubricate the outside flange of the pivot bushings and install lower control arms.
12. Lubricate end of sway bar/strut rod and control arm at sway bar mount, install bushing p/n 7109 & 7110 and loosely assemble.

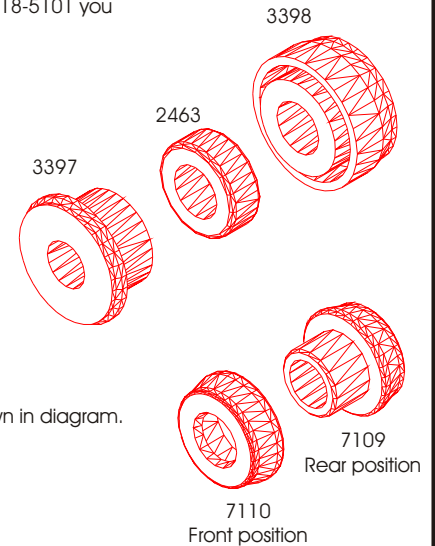

**Re-torque all fasteners to factory specifications**

©2001 Energy Suspension. All rights reserved  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

17349  
031401PS

# Installation Instructions Set # 18-3101


Read instructions carefully before beginning

**ENERGY**  
**SUSPENSION**®

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

**This kit contains parts with one or more of the following patents, 5472226 & 5275429**

1. Loosen and remove the sway bar pivot bushings and brackets. If you purchased a master set or kit number 18-5101 you may refer to this installation now..
2. Loosen and remove the hardware from the rear of the sway bar / strut rod.
3. Loosen and remove the inner pivot bolt etc. and remove the lower control arm from the vehicle.
4. Remove the strut rod bushings and discard.
5. **DO NOT DESTROY OR DISCARD THE INNER SLEEVE AS YOU MUST REUSE IT.**
6. **DO NOT REMOVE OR DESTROY THE METAL SHELL THAT CONTAINS THE PIVOT BUSHING.**
7. Remove the pivot bushing from the control arm.
8. Clean inside of shell thoroughly to remove any old bushing material.
9. Lubricate all surfaces of bushing that contact metal and insert pivot bushings p/n 3397, 2463 & 3398 as shown in diagram.
10. If you purchased the Master Set or kit number 9-13101, you may refer to that installation now.
11. Lubricate the outside flange of the pivot bushings and install lower control arms.
12. Lubricate end of sway bar/strut rod and control arm at sway bar mount, install bushing p/n 7109 & 7110 and loosely assemble.

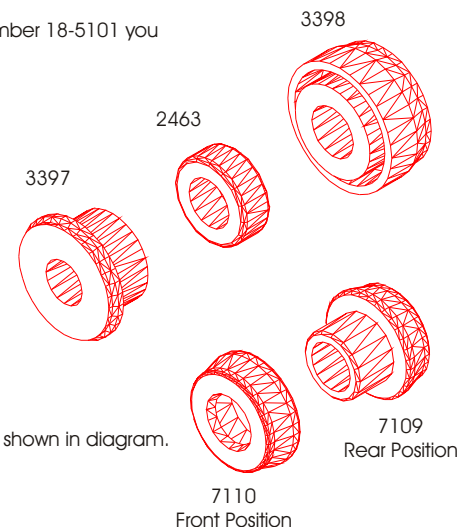

**Re-torque all fasteners to factory specifications**

©2001 Energy Suspension. All rights reserved  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

17349  
031401PS