

# Installation instructions

For set # 19-5102

02-Up Subaru WRX

**ENERGY**  
**SUSPENSION** 

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673


**Note:** It is recommended that this set be professionally installed if you are unfamiliar with this type of work, and a factory service manual be purchased prior to performing any work on your vehicle for proper disassembly, reassembly and torque specs. These instructions are intended for bushing removal and install of Energy Suspension polyurethane bushings, once you have removed the factory component from your vehicle.

1




Push out rubber bushings from end links

4

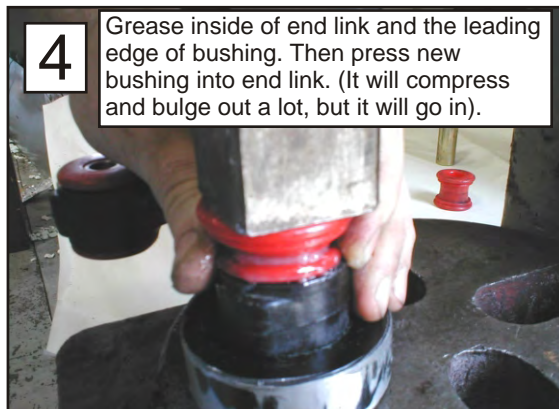

Grease inside of end link and the leading edge of bushing. Then press new bushing into end link. (It will compress and bulge out a lot, but it will go in).

2

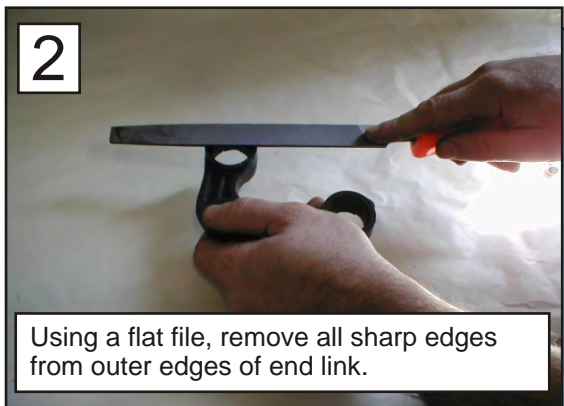

Using a flat file, remove all sharp edges from outer edges of end link.

5




Grease O.D. of metal sleeves and press into I.D. of new bushings.

3



Using a round file, remove all sharp edges from inside edges of end link.

6

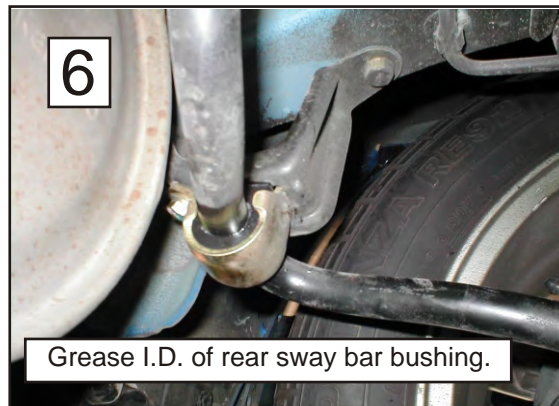

Grease I.D. of rear sway bar bushing.

© 2002 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

17374

4/Sep/02 BRH