

Instruction Sheet #3.3187

Front Control Arm Set



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.

YOU MUST REMOVE THE OEM SHELL FROM THE ARM.


Once the OEM shell and bushing have been removed, clean out the eye of the arm. Also remove any sharp burrs in the metal. Now grease the ID of the arm and the OD/ID of bushing #2599. Install #2599 in from the front (see pic). Install the #2600 thrust washer bushing over #2599. Now install supplied sleeve. Reinstall arm and now tighten all bolts back to factory specifications.

NOTE:

Due to design constraints and safety concerns, no bushings were made for the strut arm positions. These positions are seen by an X. (see pic)

Bill of Materials:

- 2 - 2599 Bushing
- 2 - 2600 Thrust Washer
- 2 - 15.10.170.39 (0.750"x0.480"x2.400")
- 2 - 9.11108 Grease packet

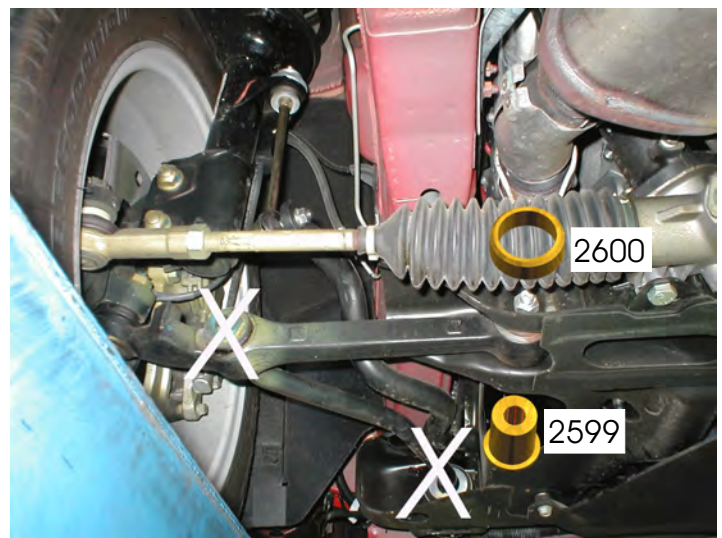

© 2005 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

012805NT

17439

Instruction Sheet #3.3187

Front Control Arm Set



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.

YOU MUST REMOVE THE OEM SHELL FROM THE ARM.


Once the OEM shell and bushing have been removed, clean out the eye of the arm. Also remove any sharp burrs in the metal. Now grease the ID of the arm and the OD/ID of bushing #2599. Install #2599 in from the front (see pic). Install the #2600 thrust washer bushing over #2599. Now install supplied sleeve. Reinstall arm and now tighten all bolts back to factory specifications.

NOTE:

Due to design constraints and safety concerns, no bushings were made for the strut arm positions. These positions are seen by an X. (see pic)

Bill of Materials:

- 2 - 2599 Bushing
- 2 - 2600 Thrust Washer
- 2 - 15.10.170.39 (0.750"x0.480"x2.400")
- 2 - 9.11108 Grease packet

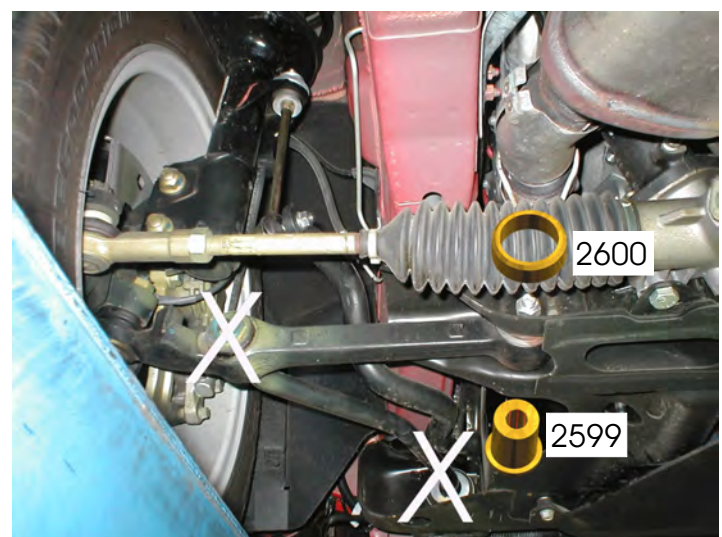

© 2005 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

012805NT

17439