


Cam bolt style bushing's use a special embossed washer on each end of the sleeve. To remove these washers, use a small punch through center of sleeve and tap washers out from opposite ends of sleeve. Washers must be reused with factory sleeves unless sleeve is supplied in set.

Remove any rubber from sleeve and/or washers. To install washers you will need to use a press or vise.

REMEMBER! Coat urethane bushing, sleeve, and shell I.D. lightly with supplied grease.

The two washers used on the bushing with the cam bolts must be reused.

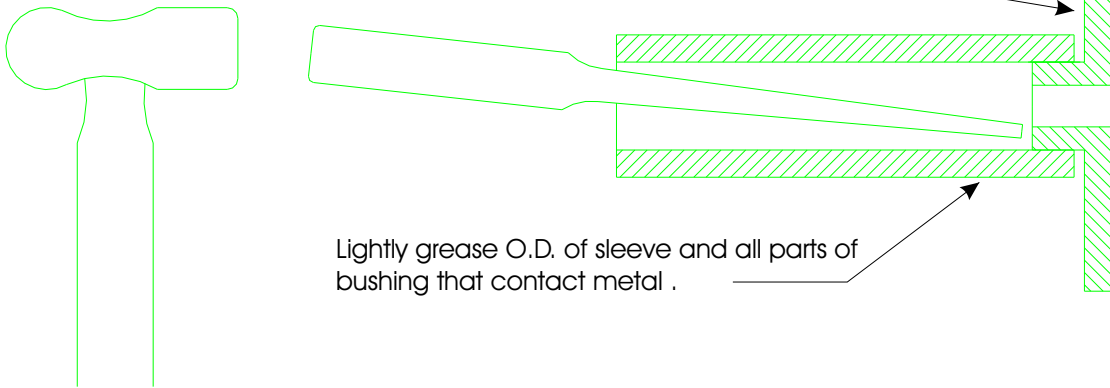

Cam bolt style bushing's use a special embossed washer on each end of the sleeve. To remove these washers, use a small punch through center of sleeve and tap washers out from opposite ends of sleeve. Washers must be reused with factory sleeves unless sleeve is supplied in set.

Remove any rubber from sleeve and/or washers. To install washers you will need to use a press or vise.

REMEMBER! Coat urethane bushing, sleeve, and shell I.D. lightly with supplied grease.

The two washers used on the bushing with the cam bolts must be reused.

